

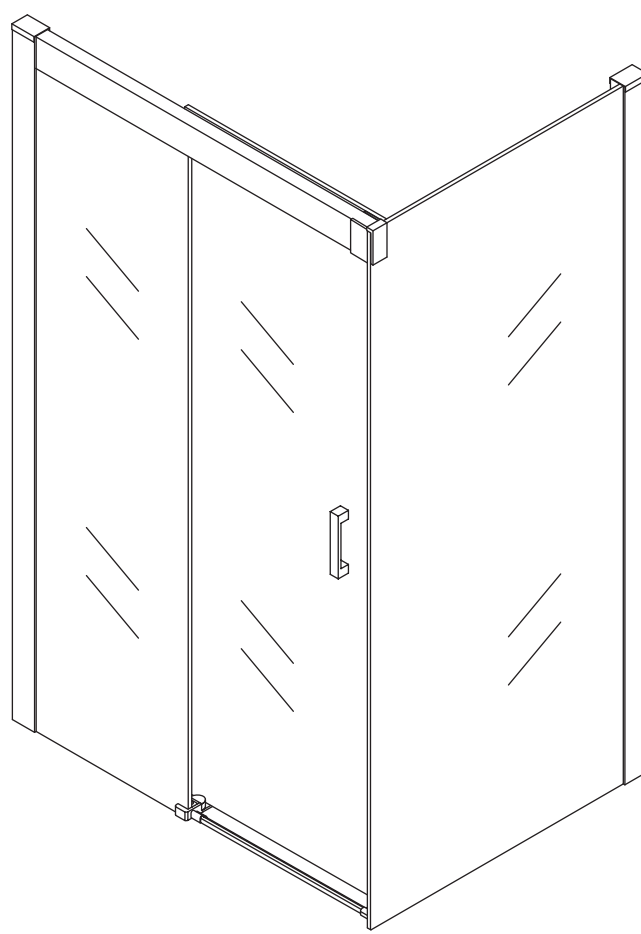



INSTALLATIE VOORSCHRIFT

ZIJWAND VOOR SCHUIF-NISDEUREN

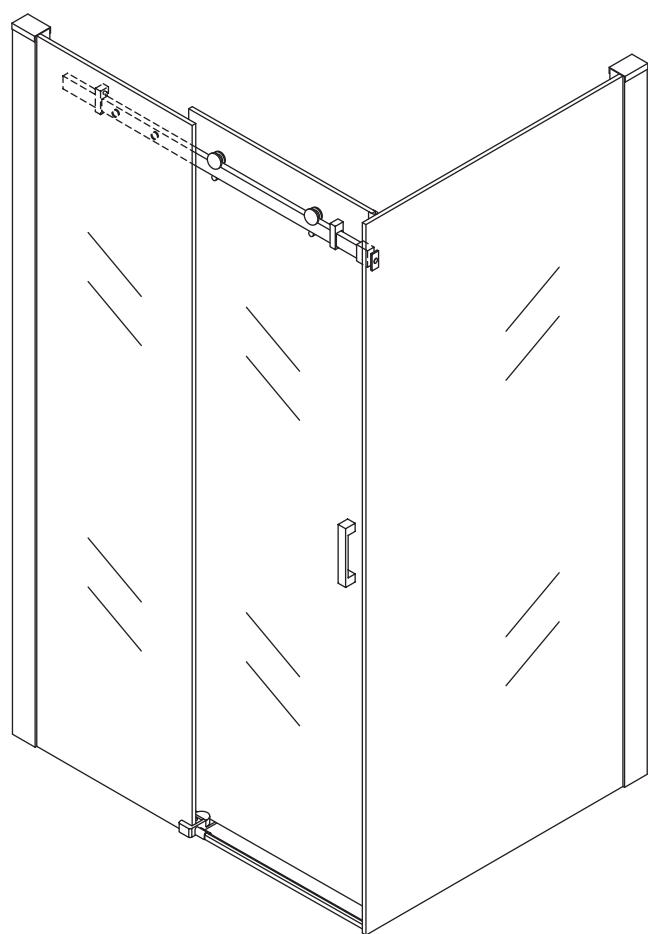

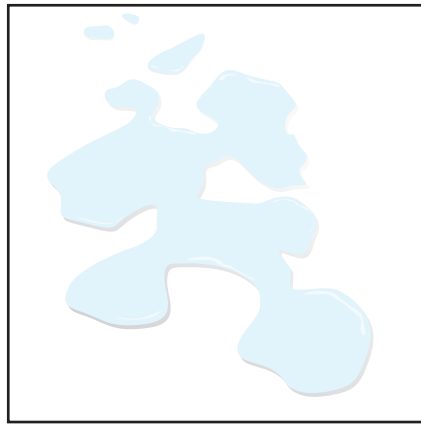


Zonder NANO

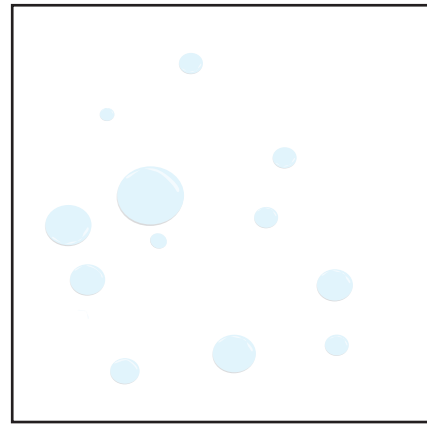


NANO






beide zijden NANO behandeld

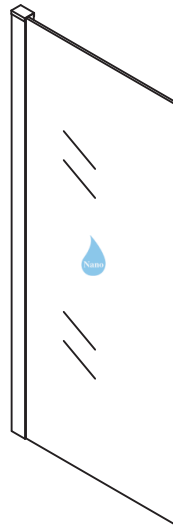


beide zijden NANO behandeld











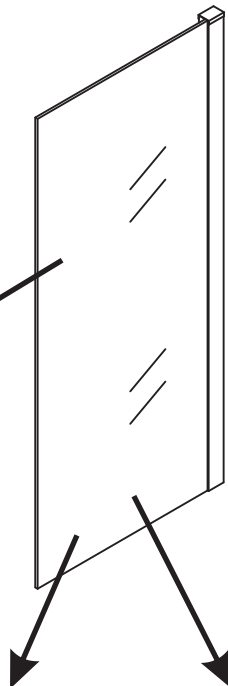


NANO garantie: 2 jaar bij normaal gebruik
LET OP: gebruik geen grove scherpe voorwerpen, zoals schuursponsjes of staalwol om het glas schoon te maken.

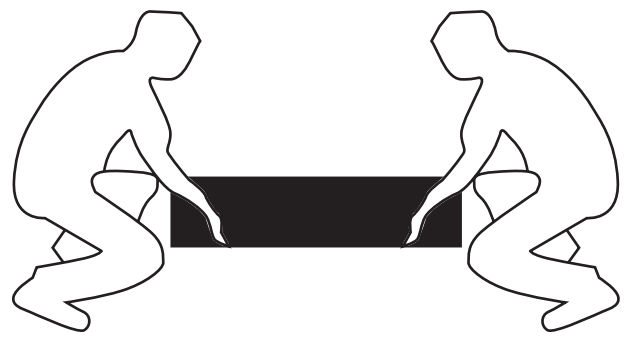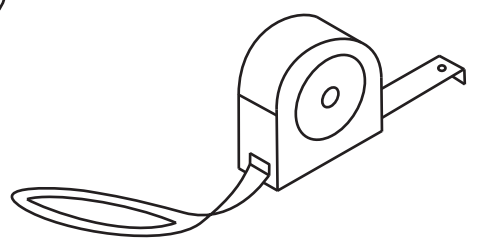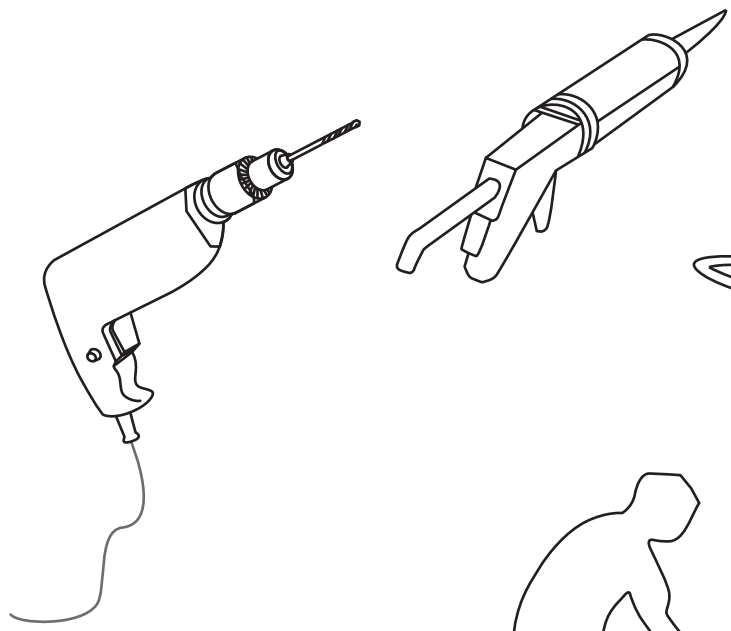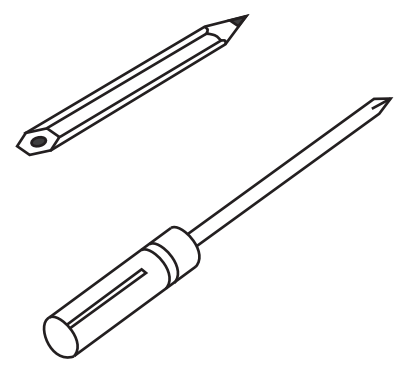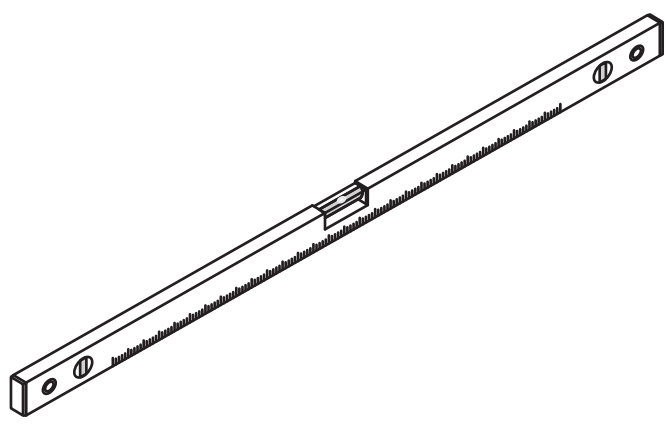

1



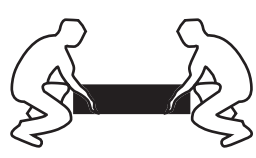


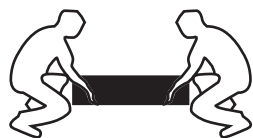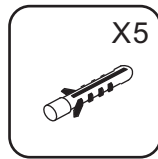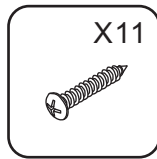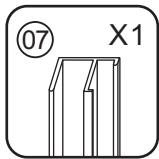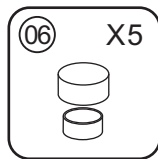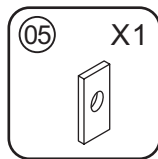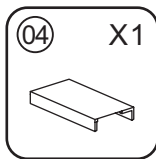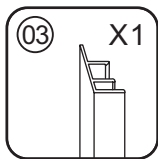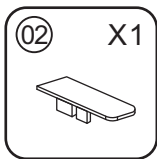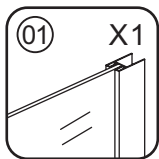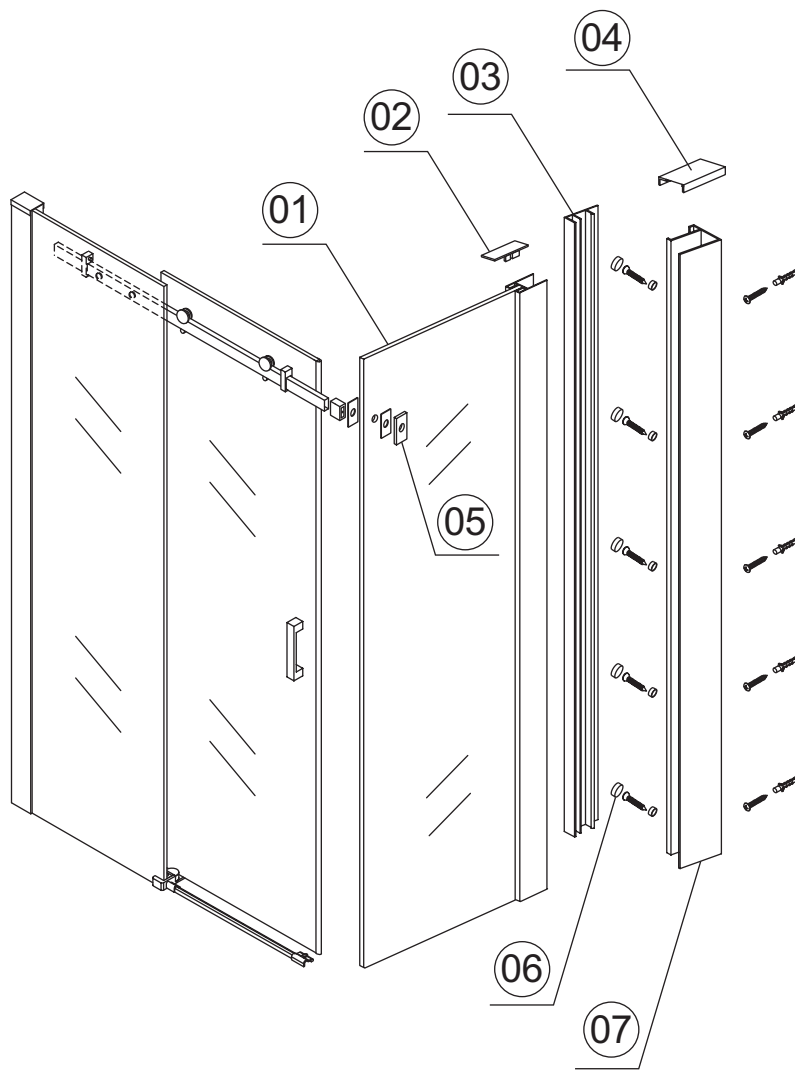



3

- 760(1200x800)
- 760(1400x800)
- 760(1600x800)
- 760(1700x800)
- 860(1200x900)
- 860(1400x900)
- 860(1600x900)
- 860(1700x900)
- 960(1200x1000)
- 960(1400x1000)
- 960(1600x1000)
- 960(1700x1000)
- 1060(1200x1100)
- 1060(1400x1100)
- 1060(1600x1100)
- 1060(1700x1100)
- 1160(1200x1200)
- 1160(1400x1200)
- 1160(1600x1200)
- 1160(1700x1200)
- 1360(1200x1400)
- 1360(1400x1400)
- 1360(1600x1400)
- 1360(1700x1400)




- 1168(1200x800)
- 1368(1400x800)
- 1568(1600x800)
- 1668(1700x800)
- 1168(1200x900)
- 1368(1400x900)
- 1568(1600x900)
- 1668(1700x900)
- 1168(1200x1000)
- 1368(1400x1000)
- 1568(1600x1000)
- 1668(1700x1000)
- 1168(1200x1100)
- 1368(1400x1100)
- 1568(1600x1100)
- 1668(1700x1100)
- 1168(1200x1200)
- 1368(1400x1200)
- 1568(1600x1200)
- 1668(1700x1200)
- 1168(1200x1400)
- 1368(1400x1400)
- 1568(1600x1400)
- 1668(1700x1400)

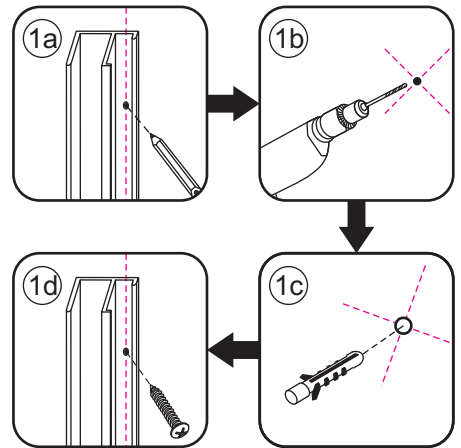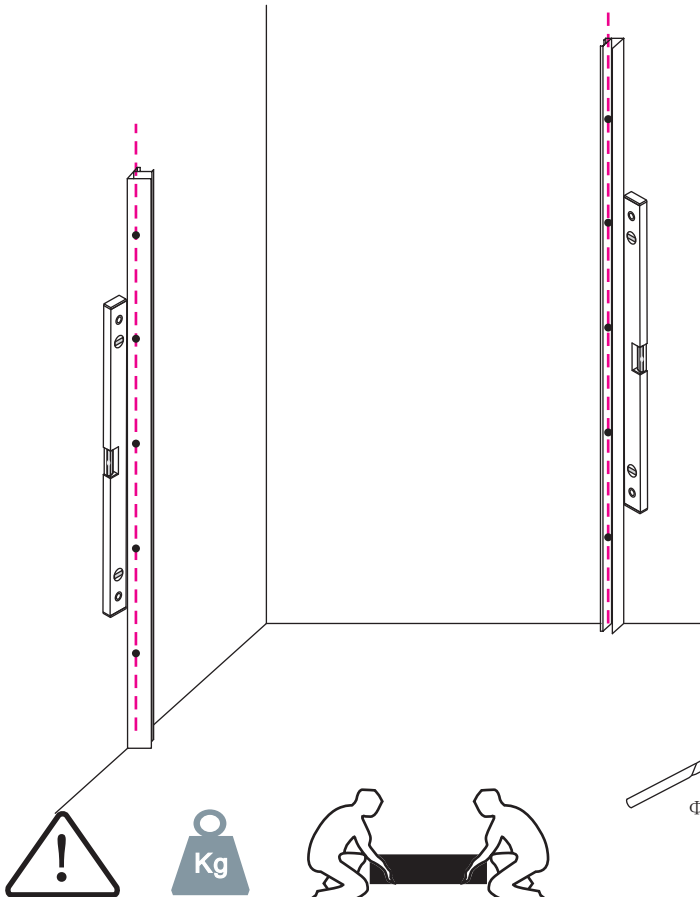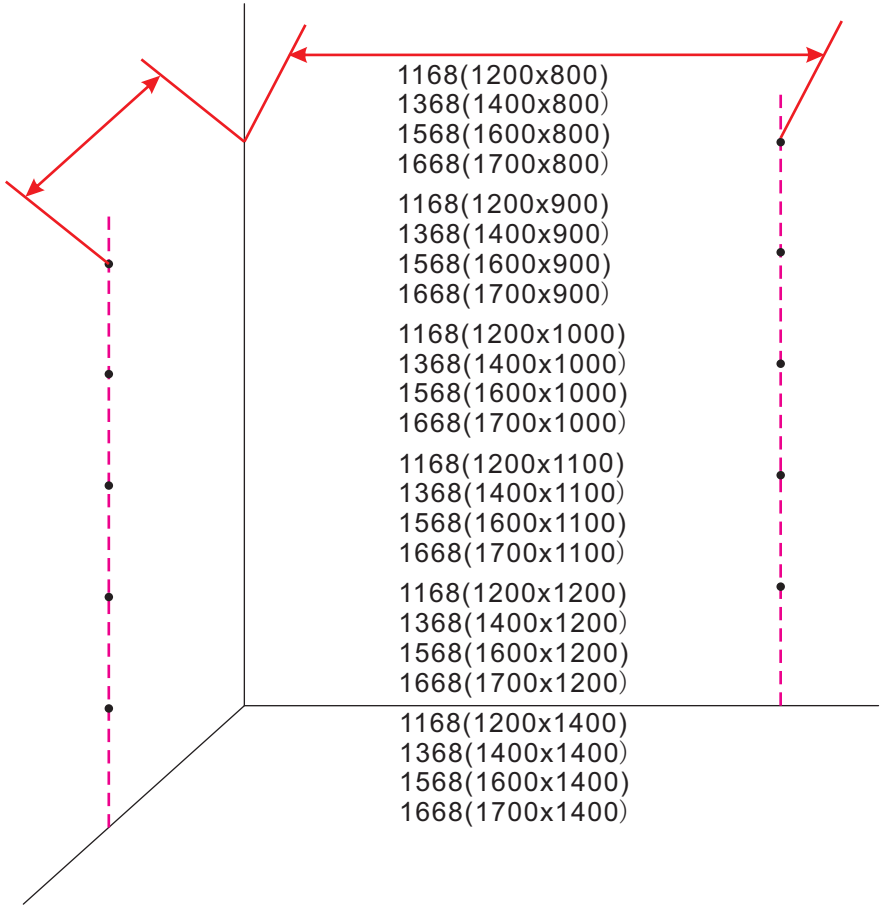





- $\Phi 6\text{mm}$
- X10 $\Phi 6 \times 30$
- X10 6×30

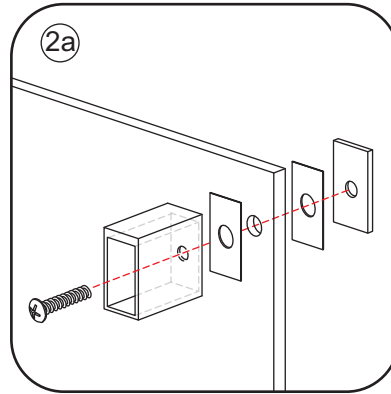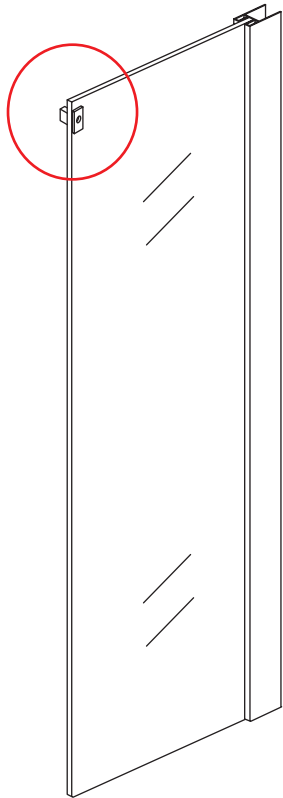


X1
4x12

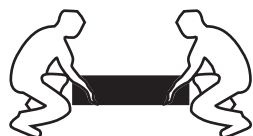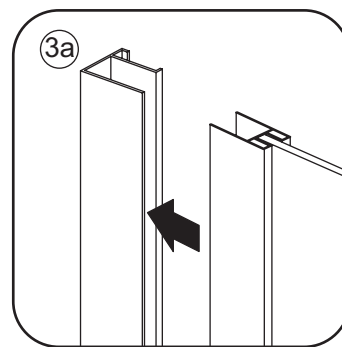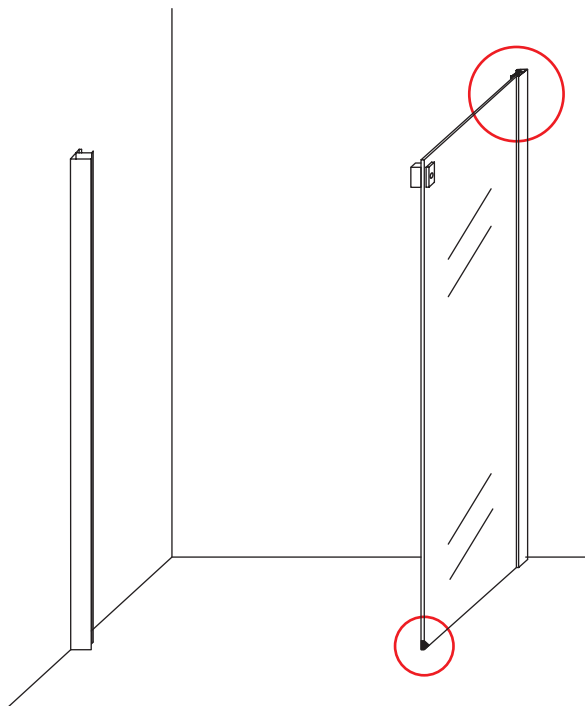


**Verwijder de zwarte
hoekbeschermers
pas als de cabine
helemaal is geïnstalleerd!**

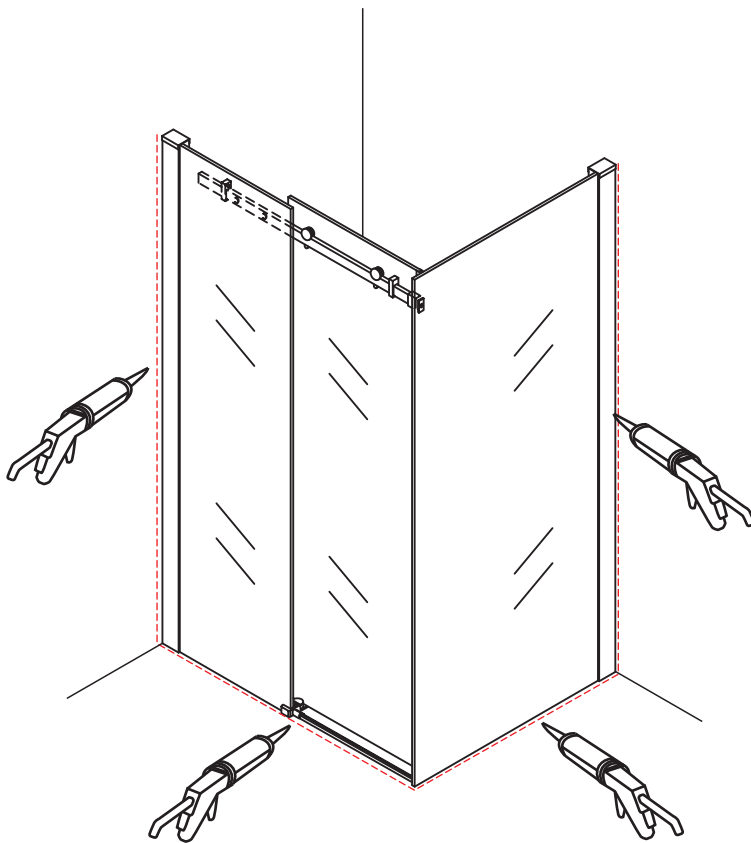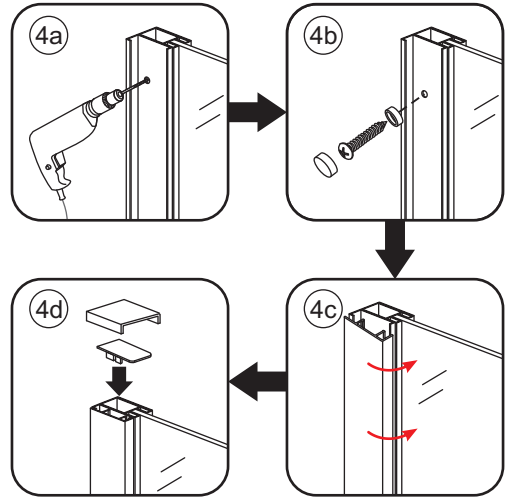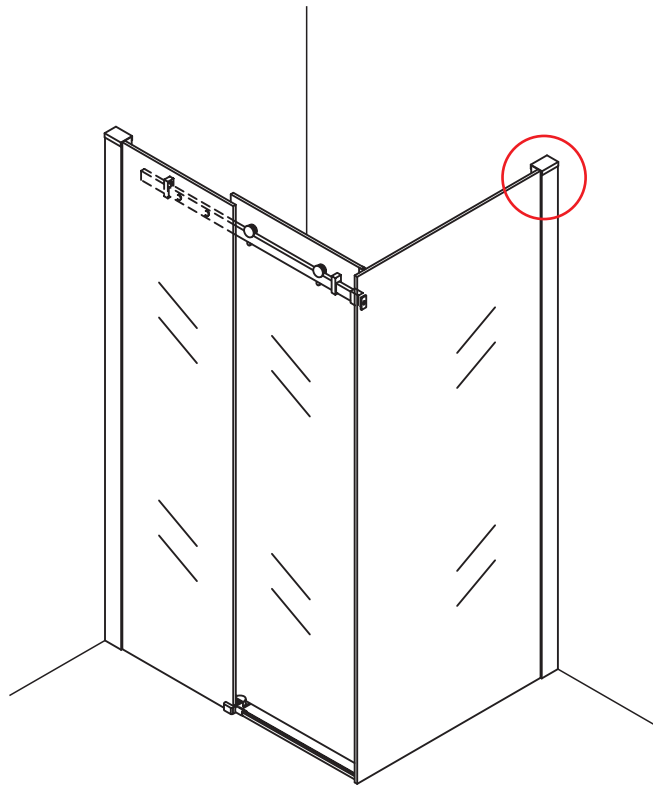


Voorzie alleen de
buitenzijde van de
cabine van siliconenkit.

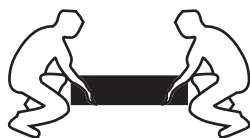

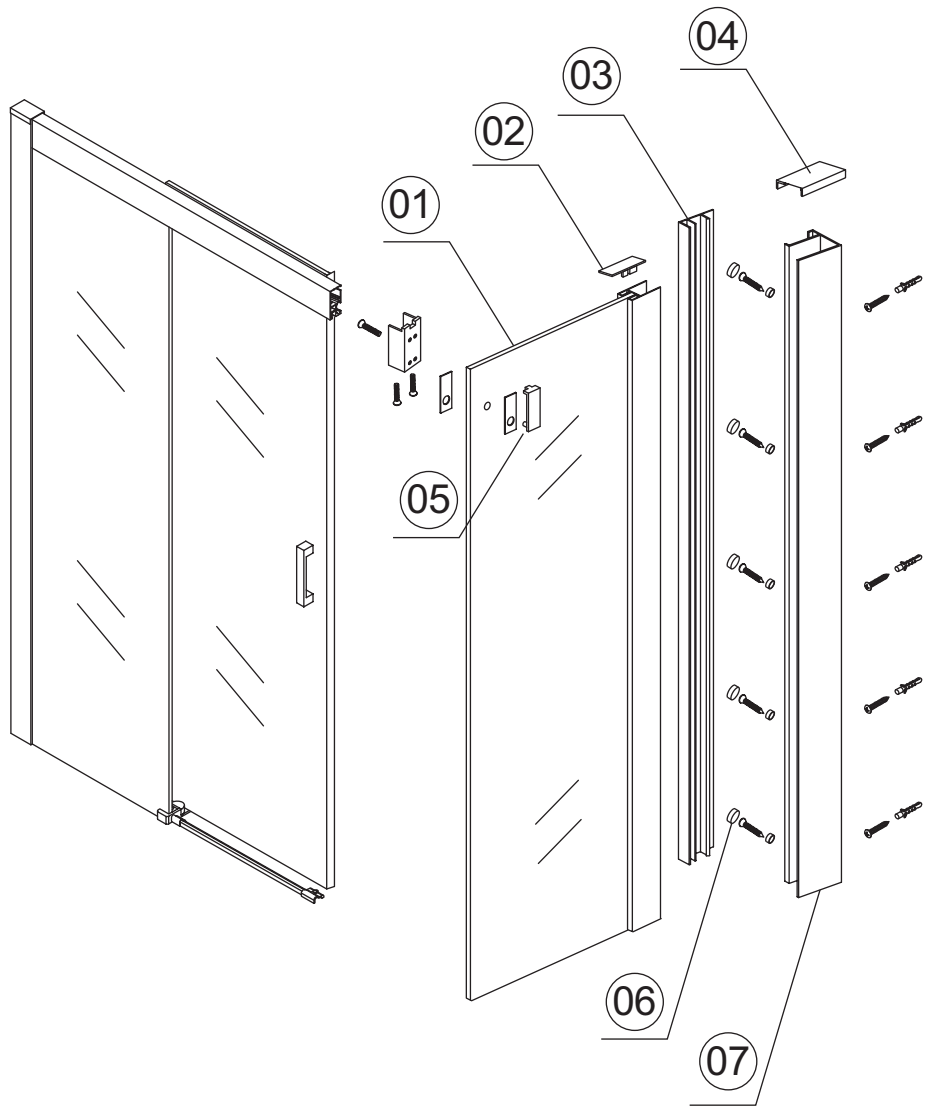







- | | | | | | |
|-------|-------|-------|-------|-------|-------|
| 01 X1 | 02 X1 | 03 X1 | 04 X1 | 05 X2 | 06 X5 |
| 07 X1 | X11 | X5 | | | |



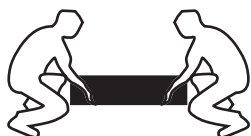



7





- 760(1200x800)
- 760(1400x800)
- 760(1600x800)
- 760(1700x800)
- 860(1200x900)
- 860(1400x900)
- 860(1600x900)
- 860(1700x900)
- 960(1200x1000)
- 960(1400x1000)
- 960(1600x1000)
- 960(1700x1000)
- 1060(1200x1100)
- 1060(1400x1100)
- 1060(1600x1100)
- 1060(1700x1100)
- 1160(1200x1200)
- 1160(1400x1200)
- 1160(1600x1200)
- 1160(1700x1200)
- 1360(1200x1400)
- 1360(1400x1400)
- 1360(1600x1400)
- 1360(1700x1400)

- 1168(1200x800)
- 1368(1400x800)
- 1568(1600x800)
- 1668(1700x800)
- 1168(1200x900)
- 1368(1400x900)
- 1568(1600x900)
- 1668(1700x900)
- 1168(1200x1000)
- 1368(1400x1000)
- 1568(1600x1000)
- 1668(1700x1000)
- 1168(1200x1100)
- 1368(1400x1100)
- 1568(1600x1100)
- 1668(1700x1100)
- 1168(1200x1200)
- 1368(1400x1200)
- 1568(1600x1200)
- 1668(1700x1200)
- 1168(1200x1400)
- 1368(1400x1400)
- 1568(1600x1400)
- 1668(1700x1400)

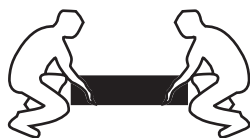
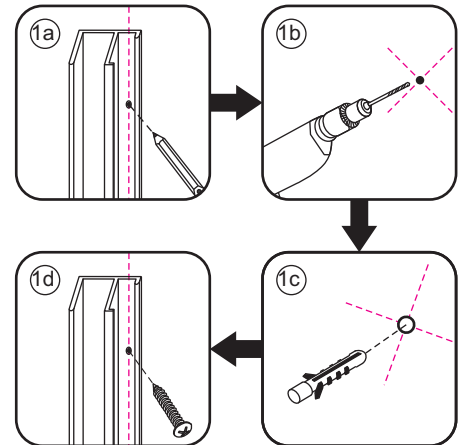
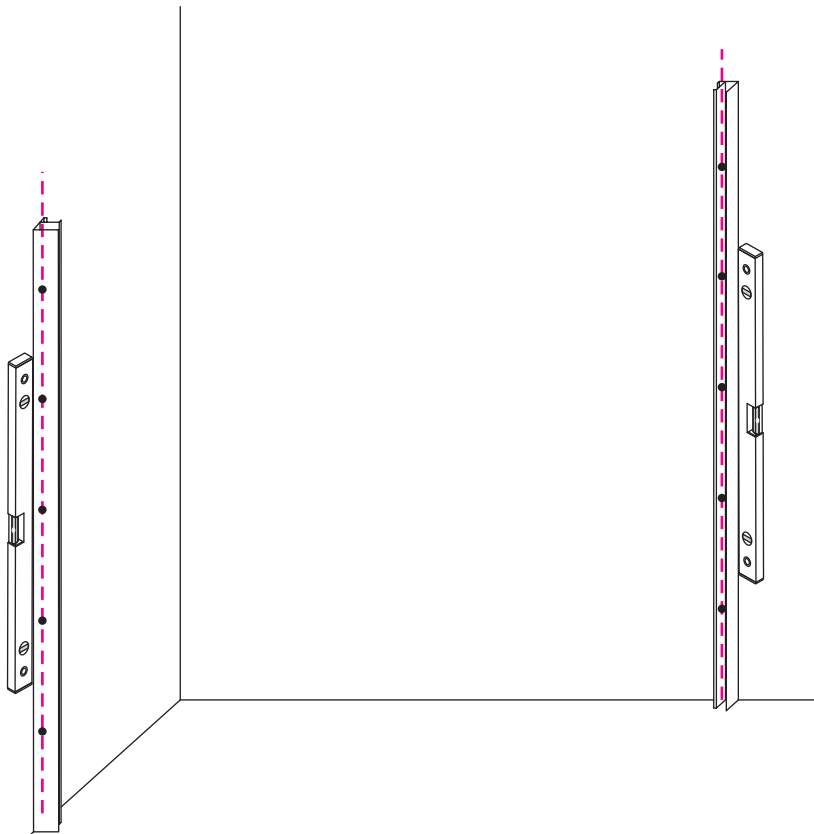
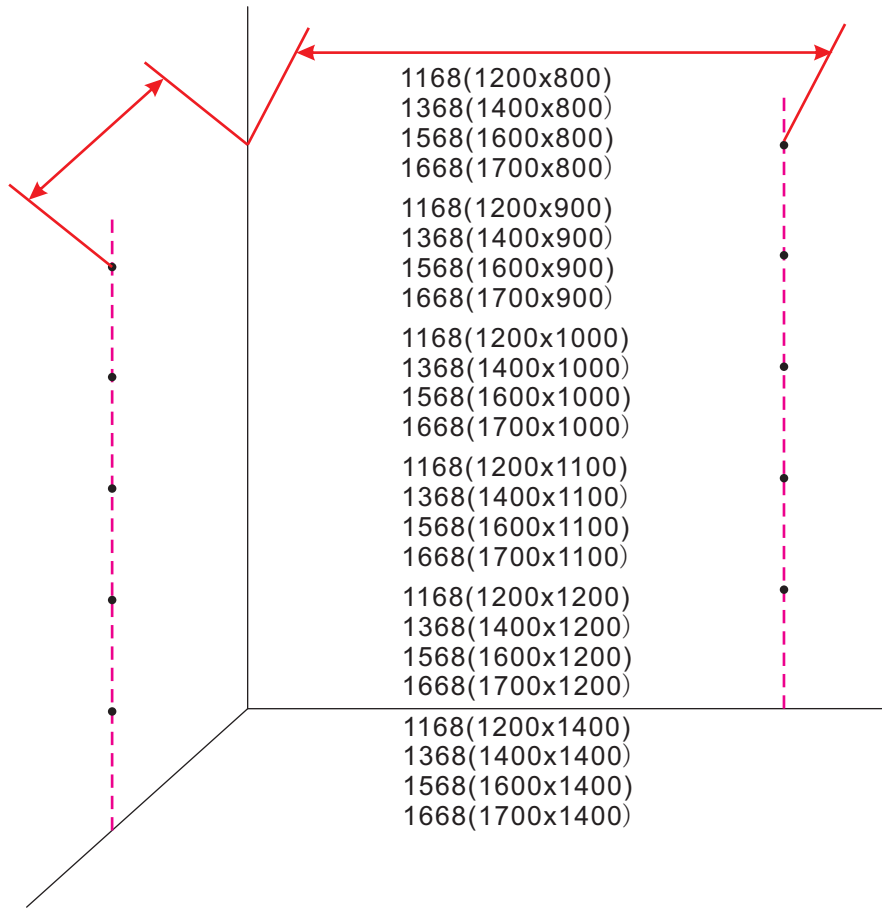


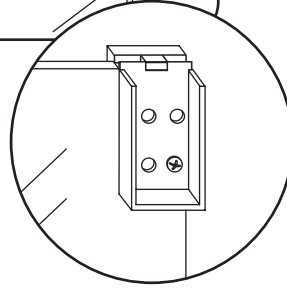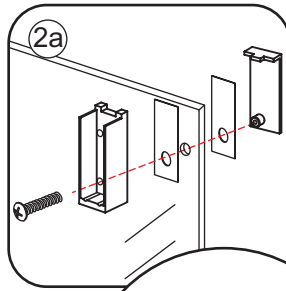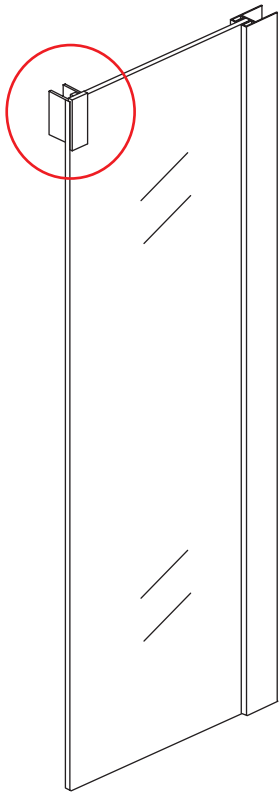

X1
 4x12

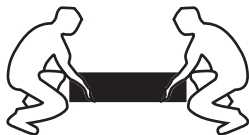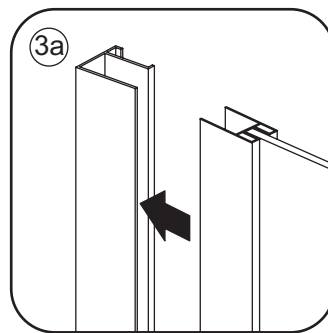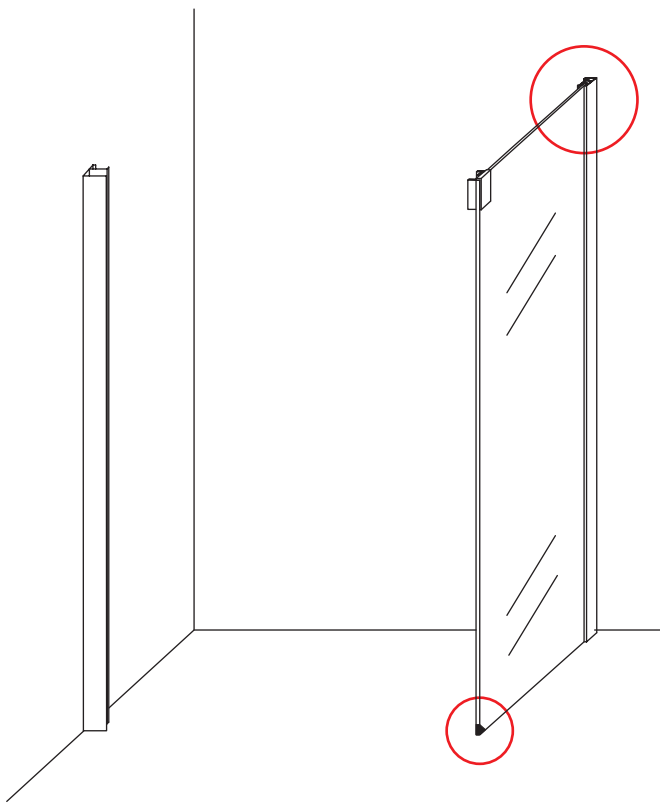

Verwijder de zwarte hoekbeschermers pas als de cabine helemaal is geïnstalleerd!

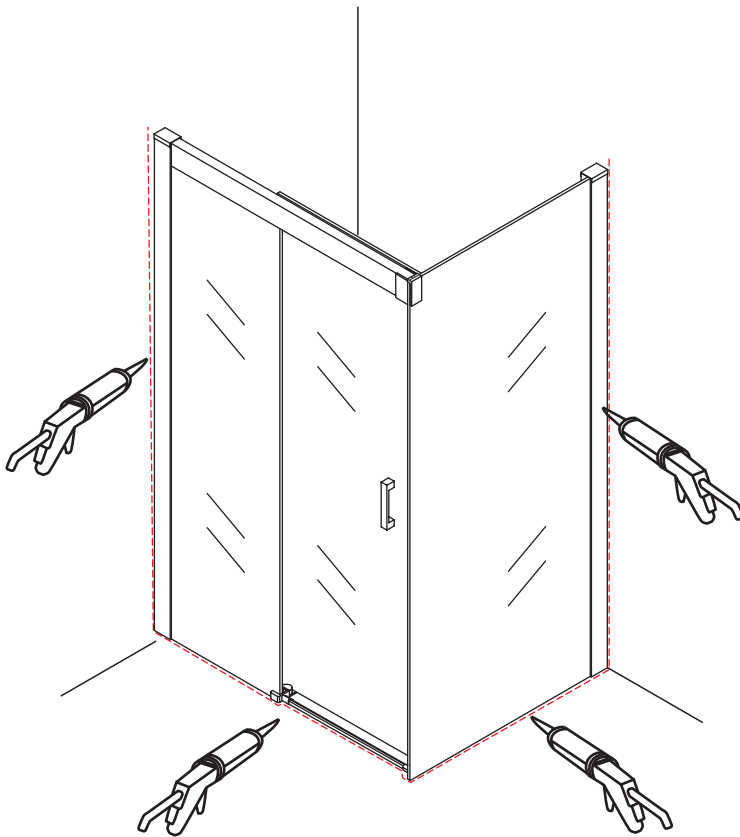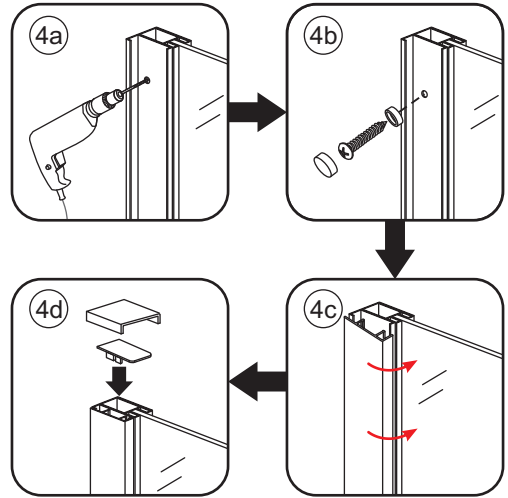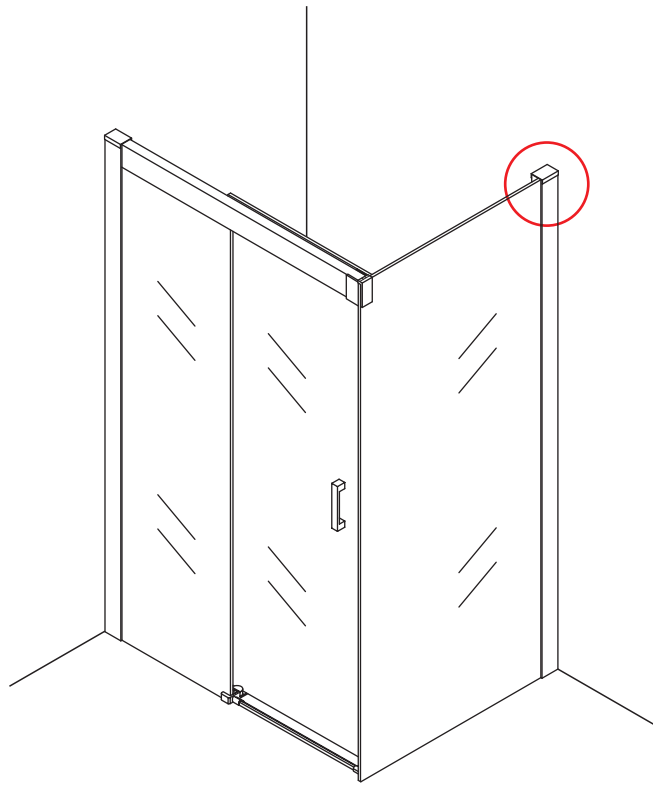

**Voorzie alleen de
buitenzijde van de
cabine van siliconenkit.**

