

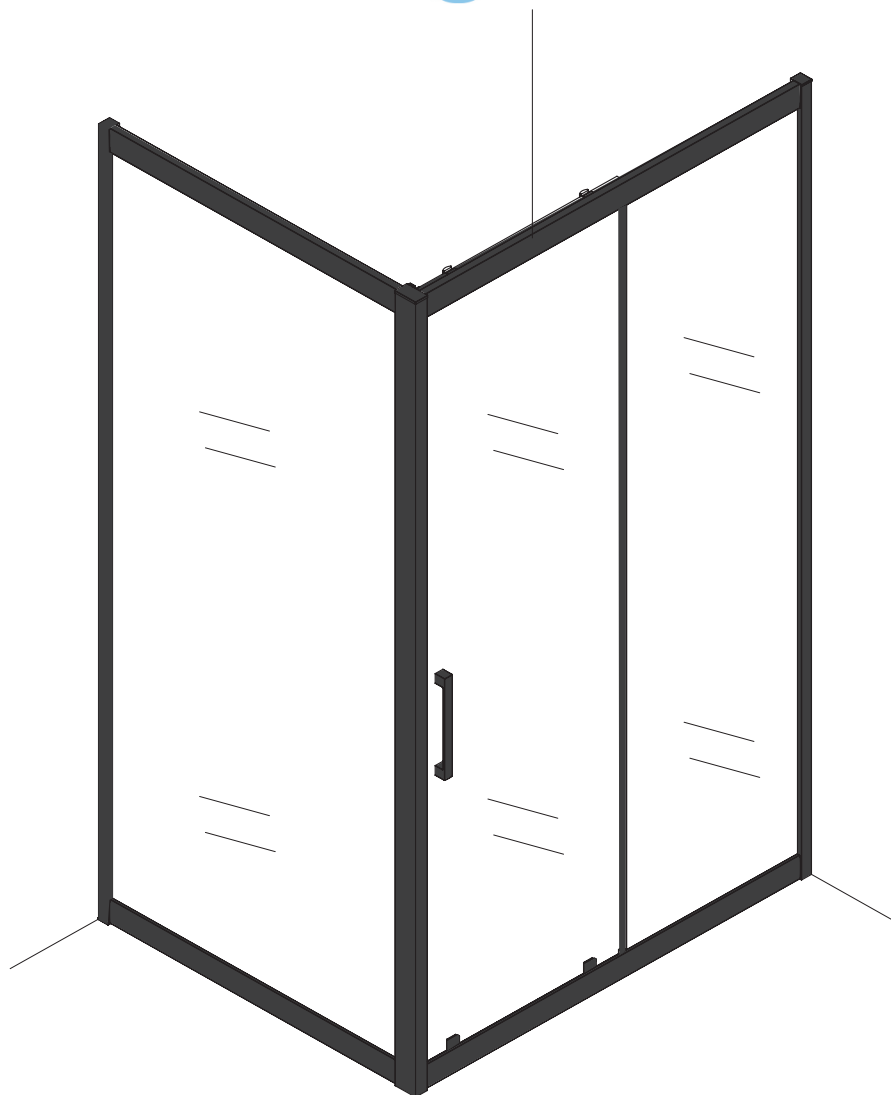
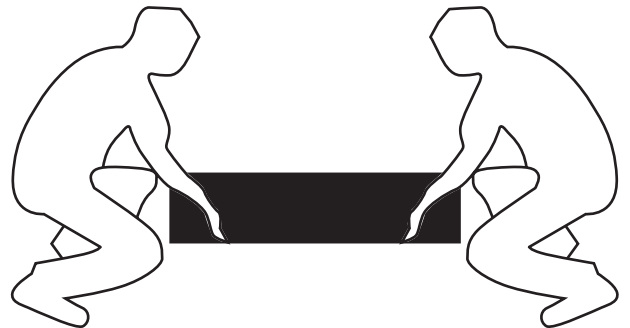
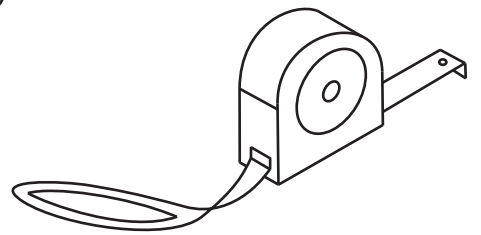
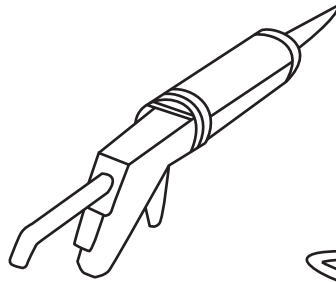
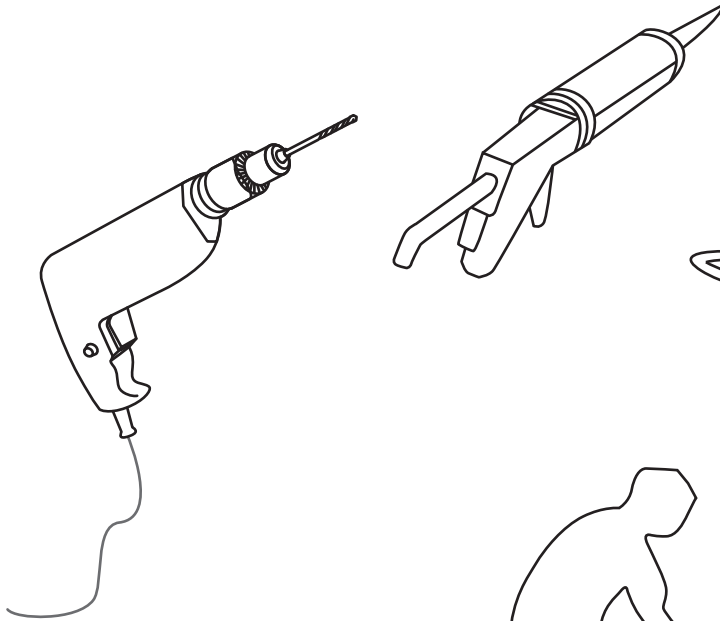
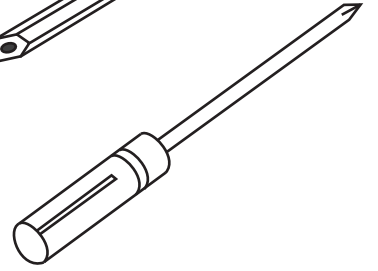


INSTALLATIE VOORSCHRIFT


Skyline side panel


900(880-890)x2000

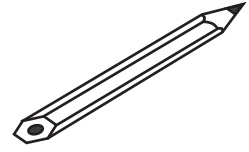

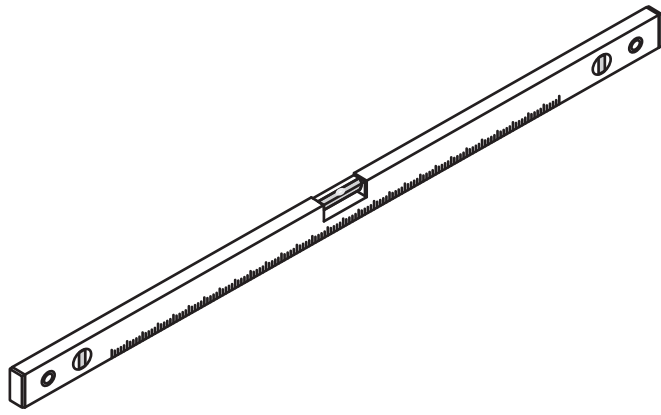


1






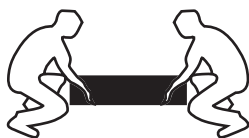









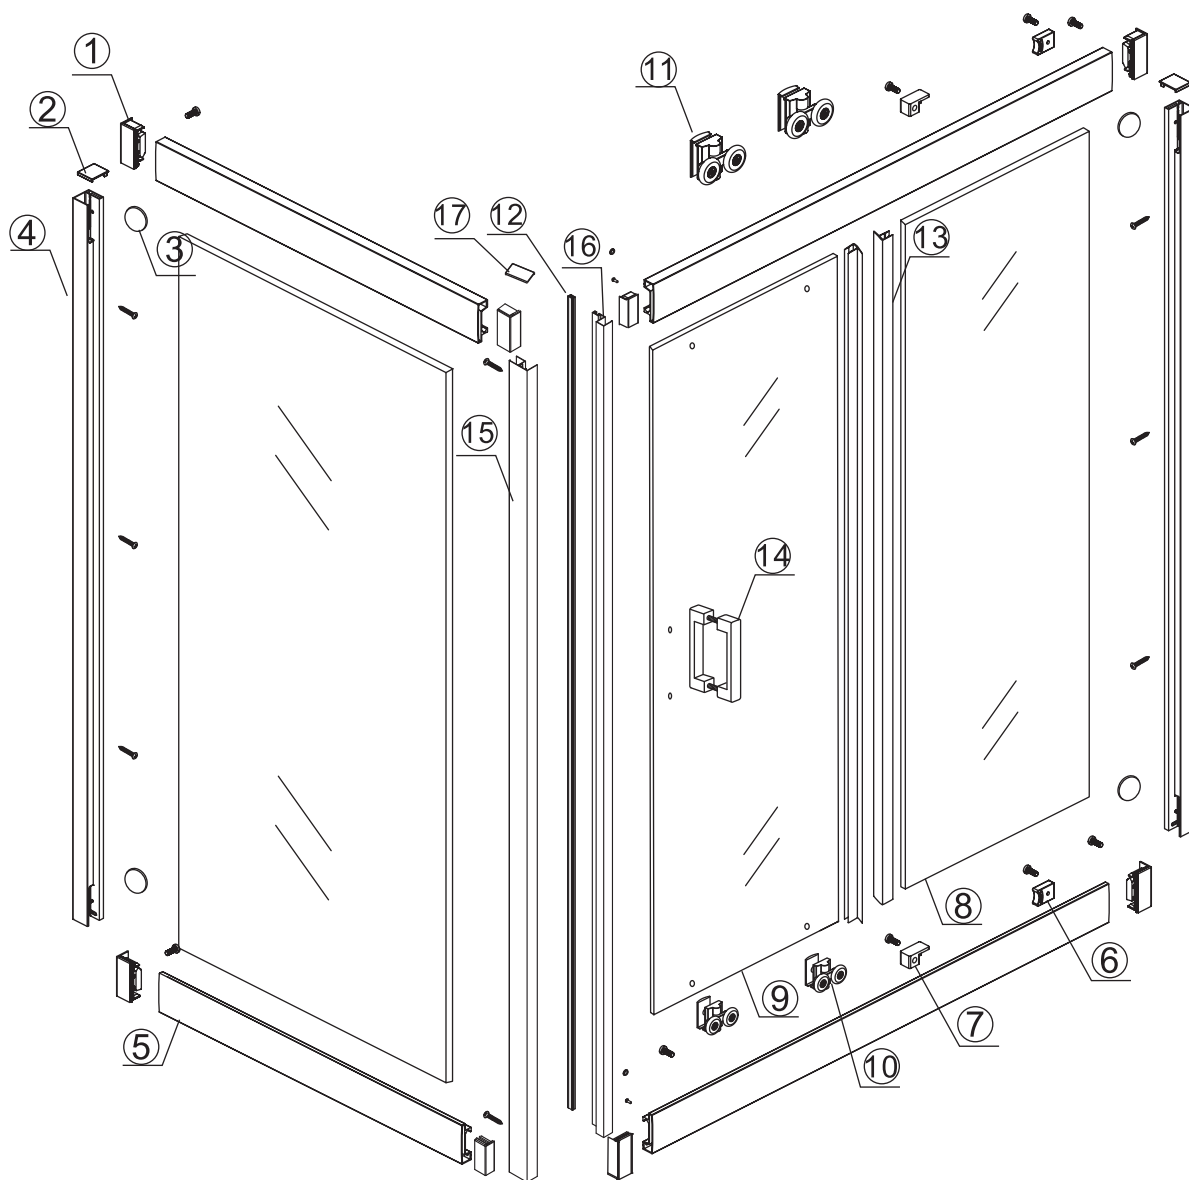


① X8	② X2	③ X7	④ X2	⑤ X4	⑥ X2	⑦ X2
⑧ X2	⑨ X1	⑩ X2	⑪ X2	⑫ X1	⑬ X2	⑭ X1
⑮	⑯	⑰	X1	X18	X6	X3






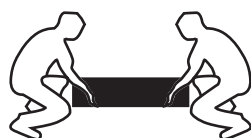


3

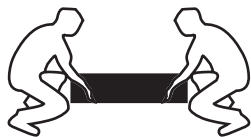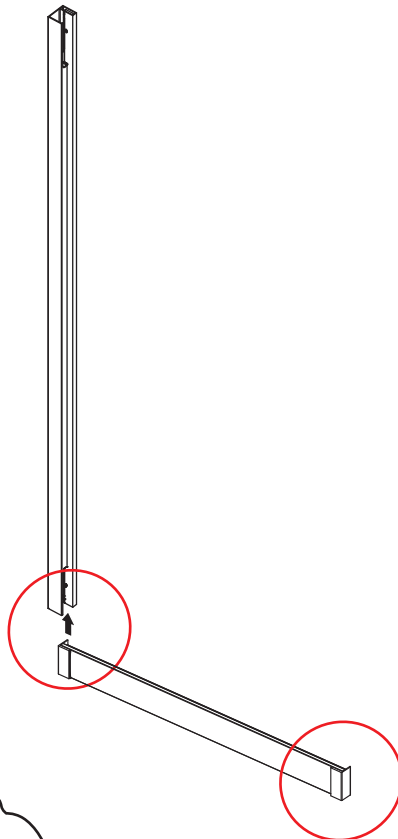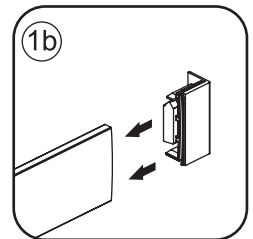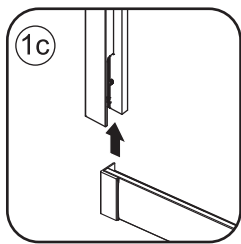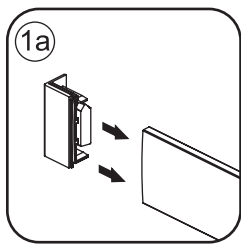
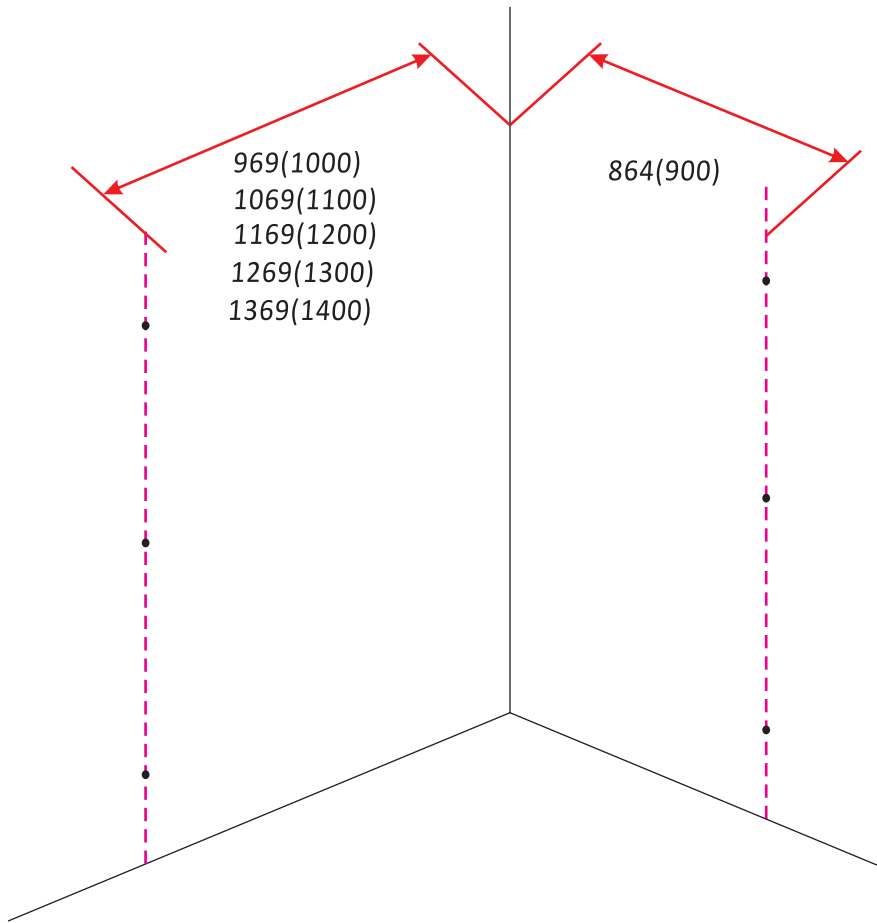


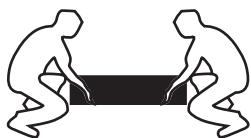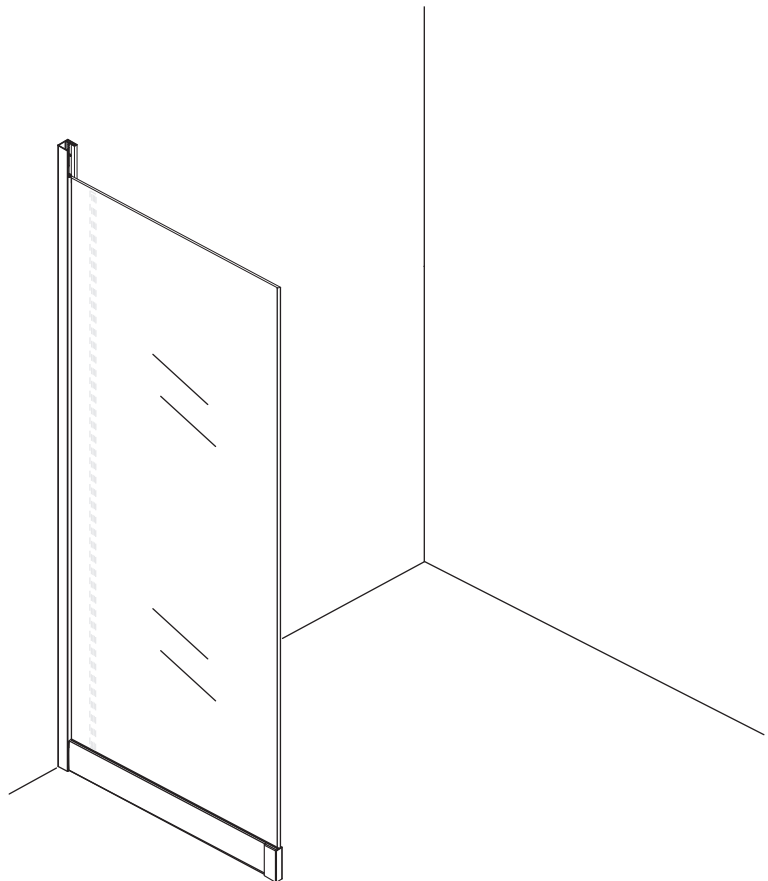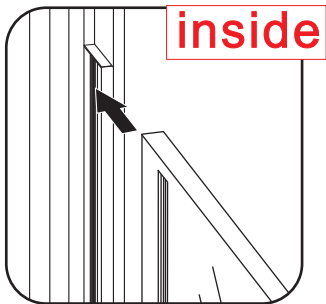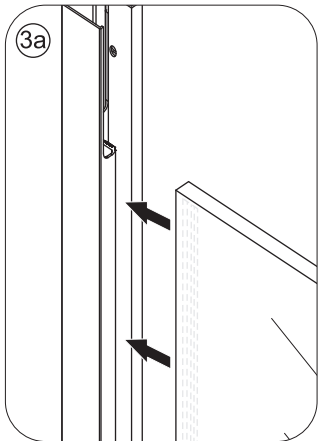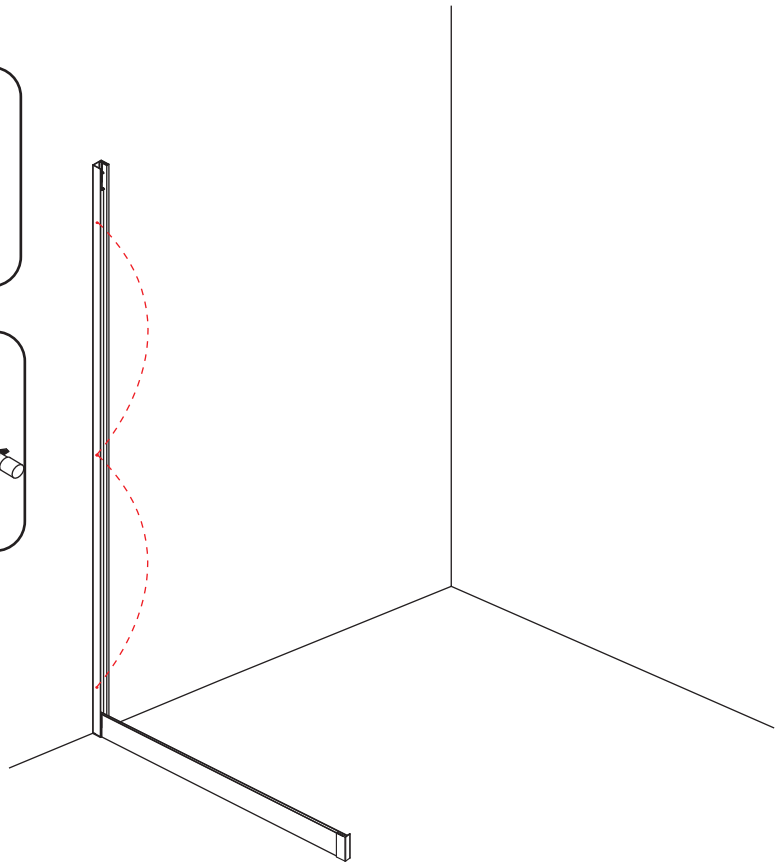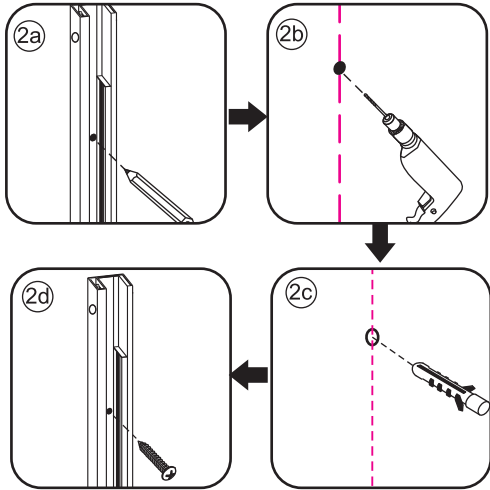


5

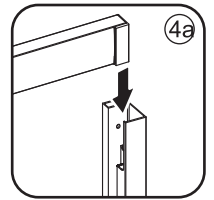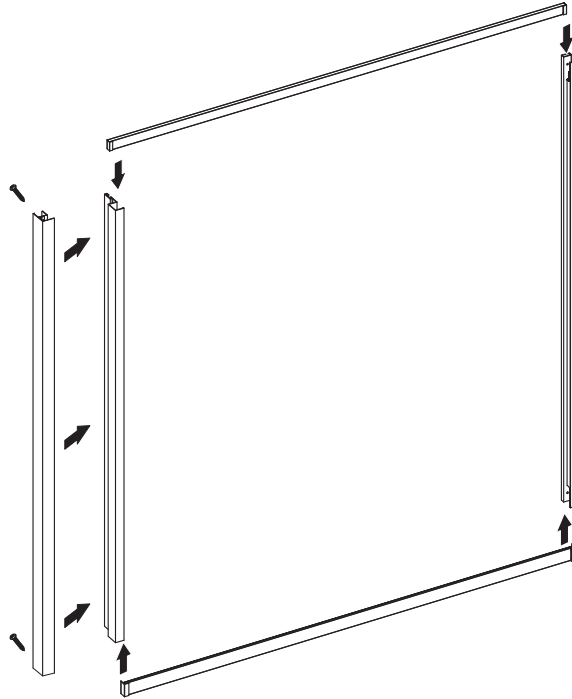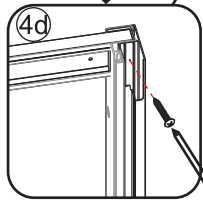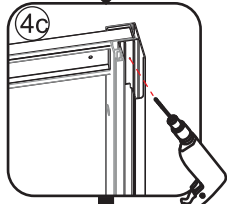
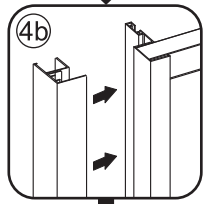
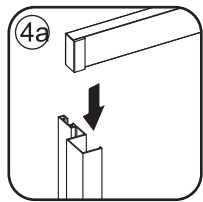


X2
M4x16

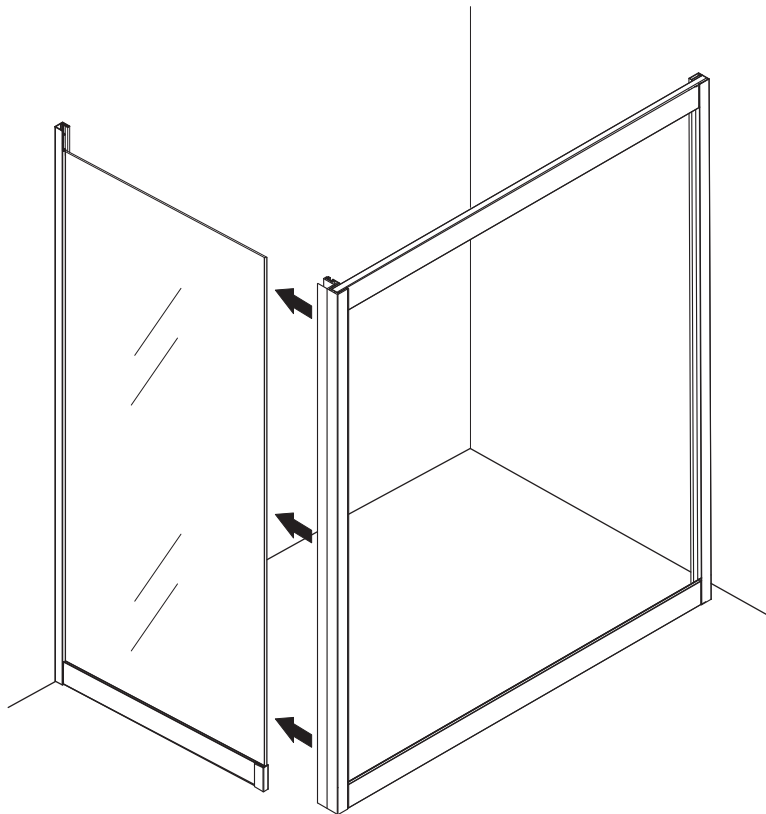



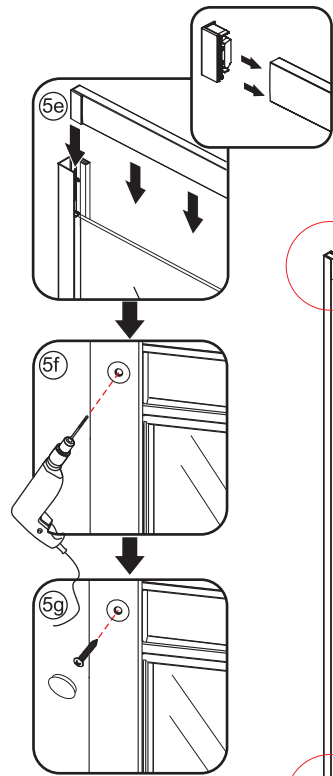


X2
M4x16











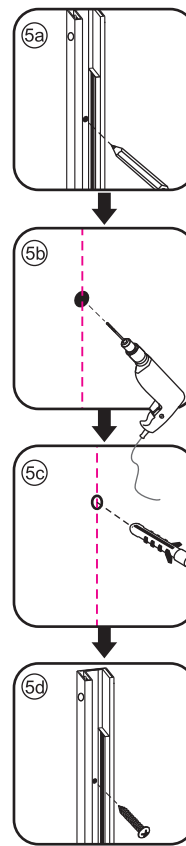
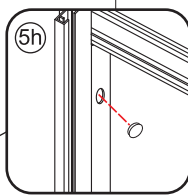
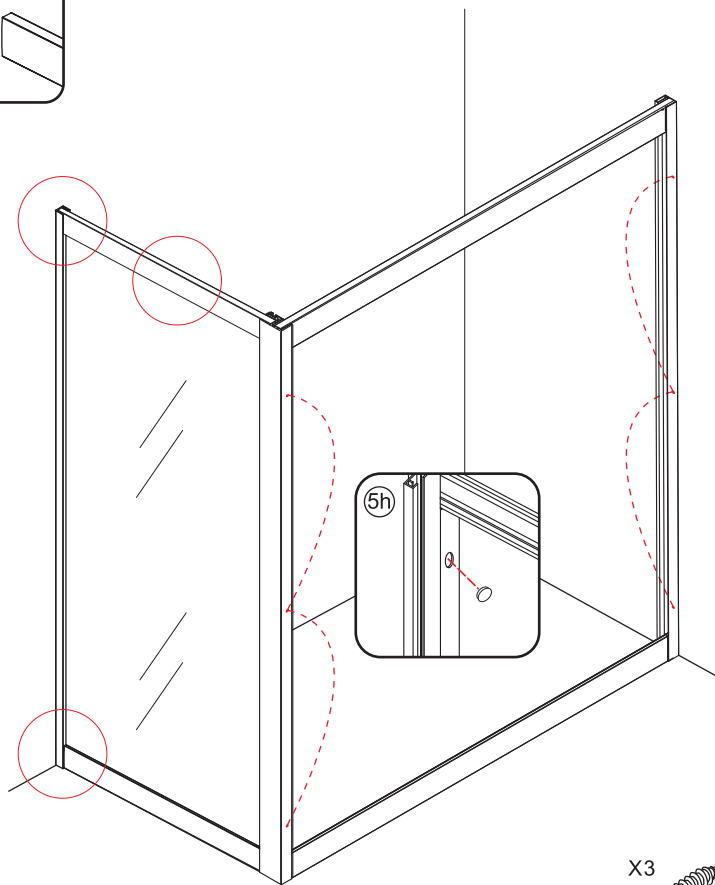






X3
M4x30

X3
M4x30

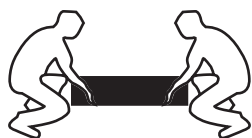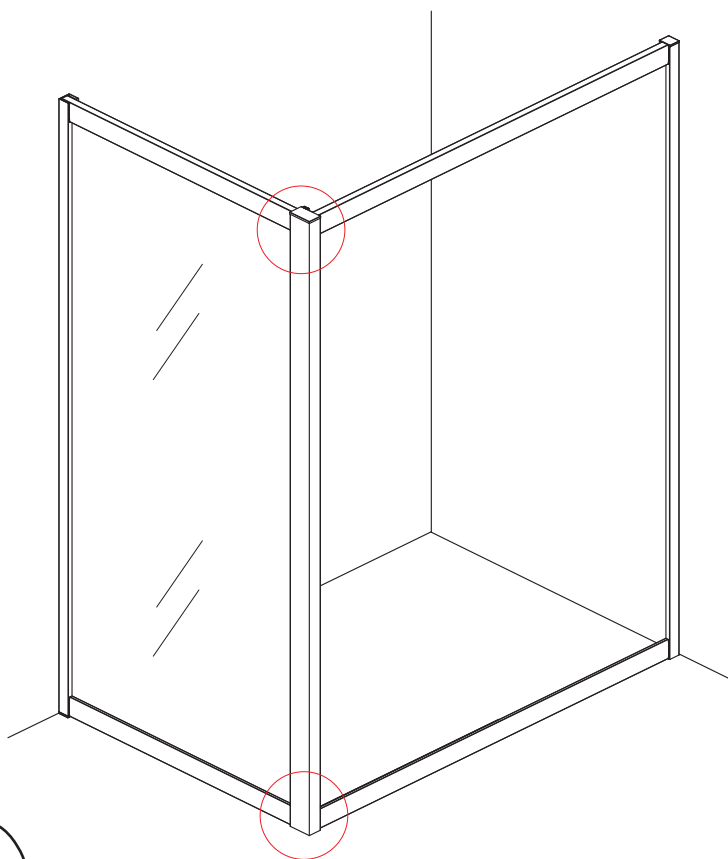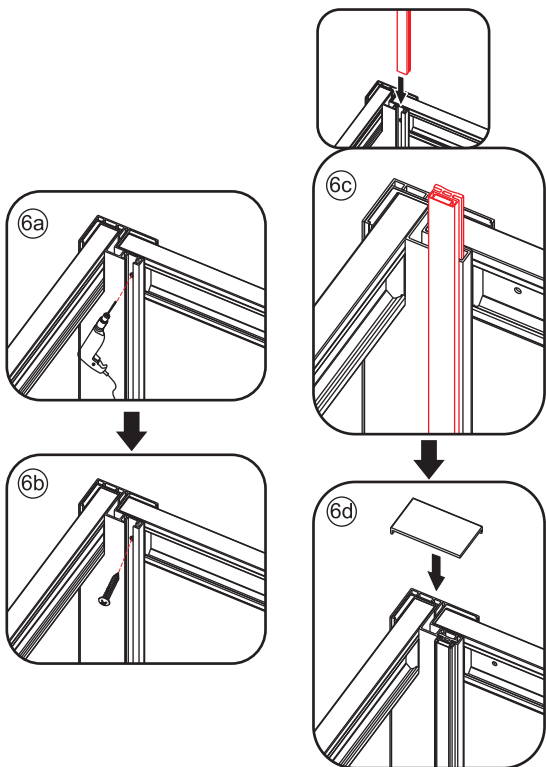






7

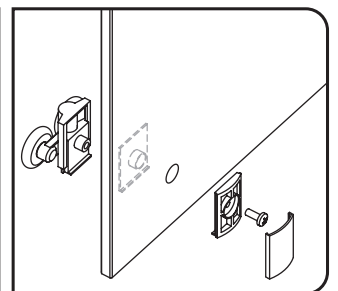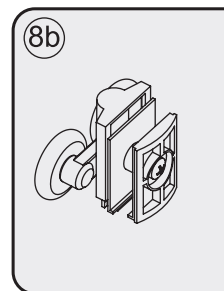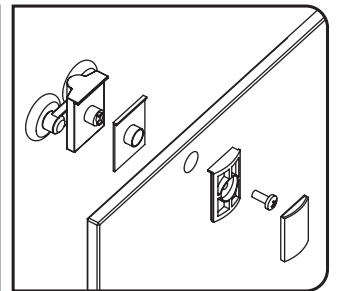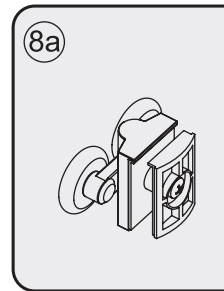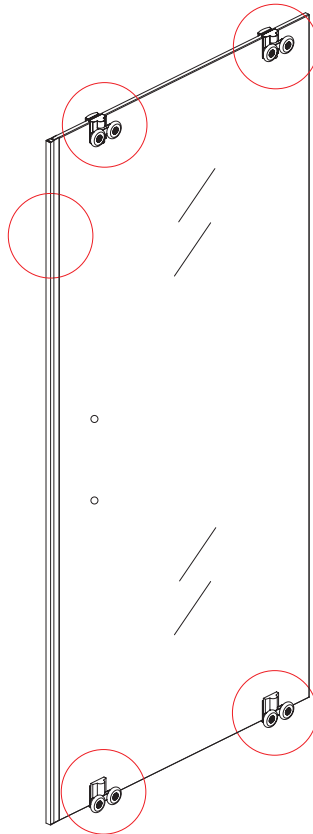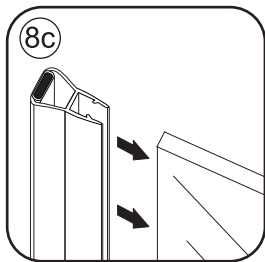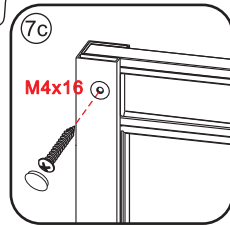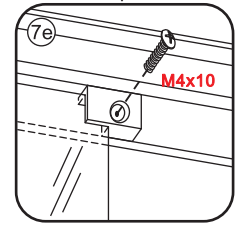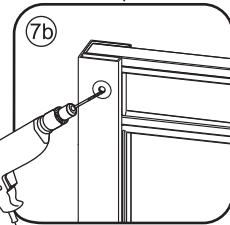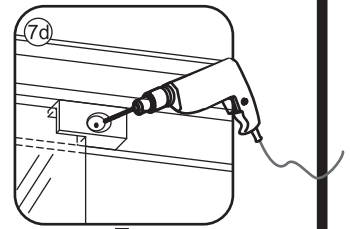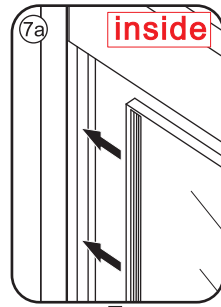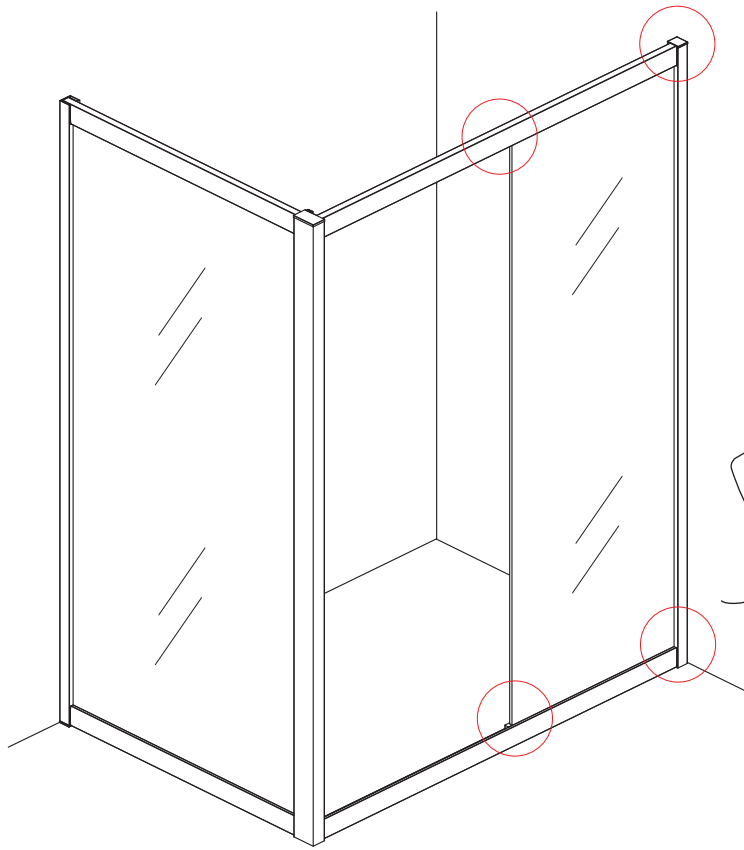

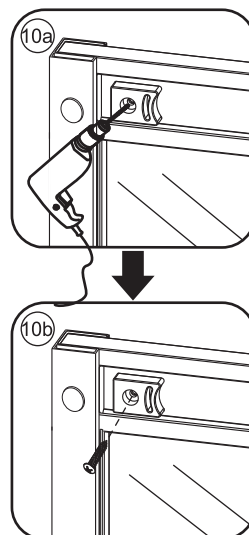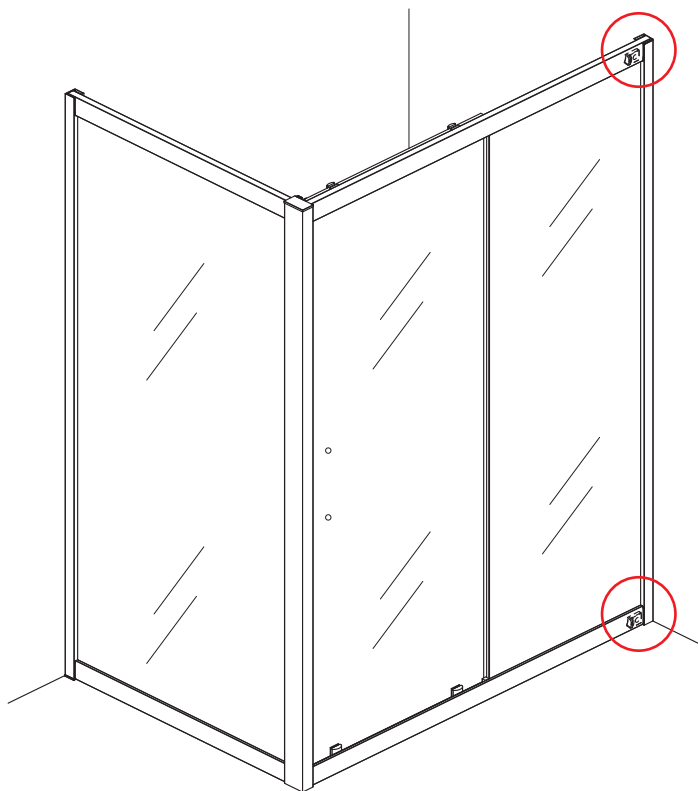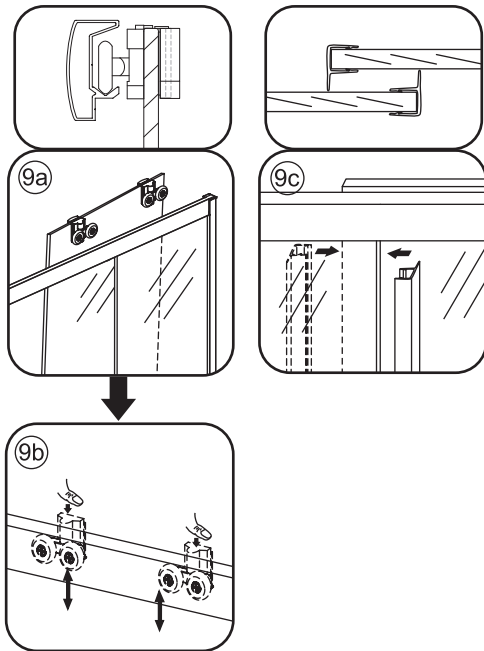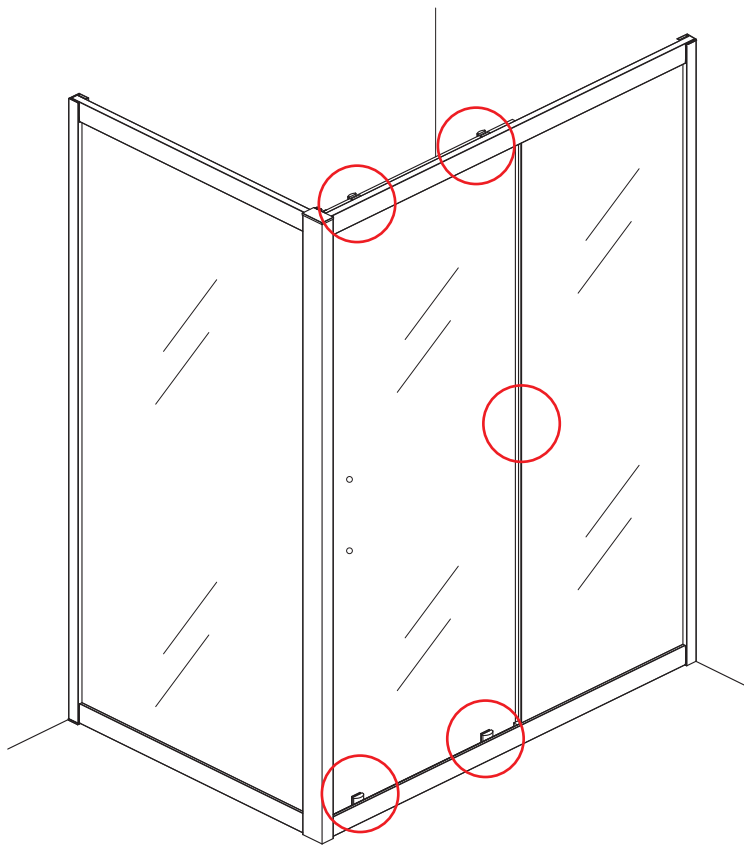

X2
M4x8

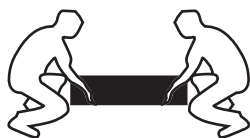

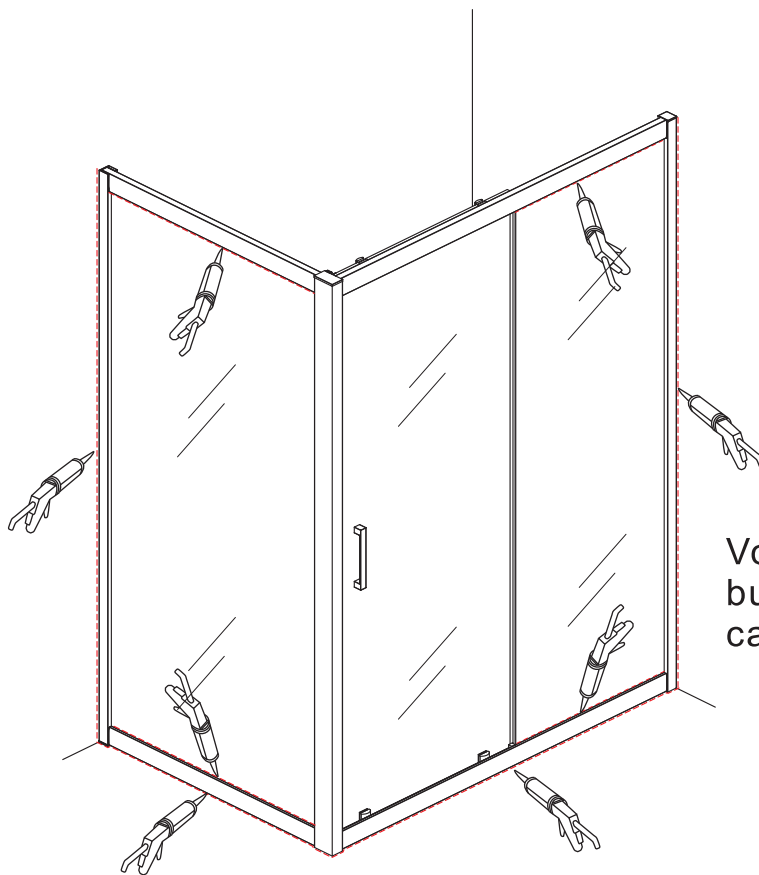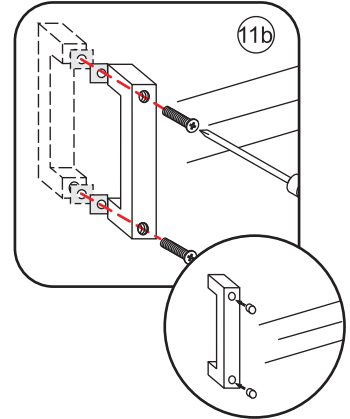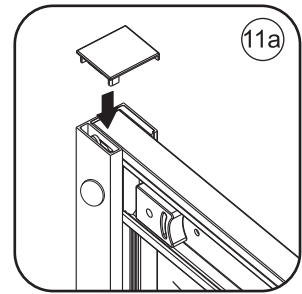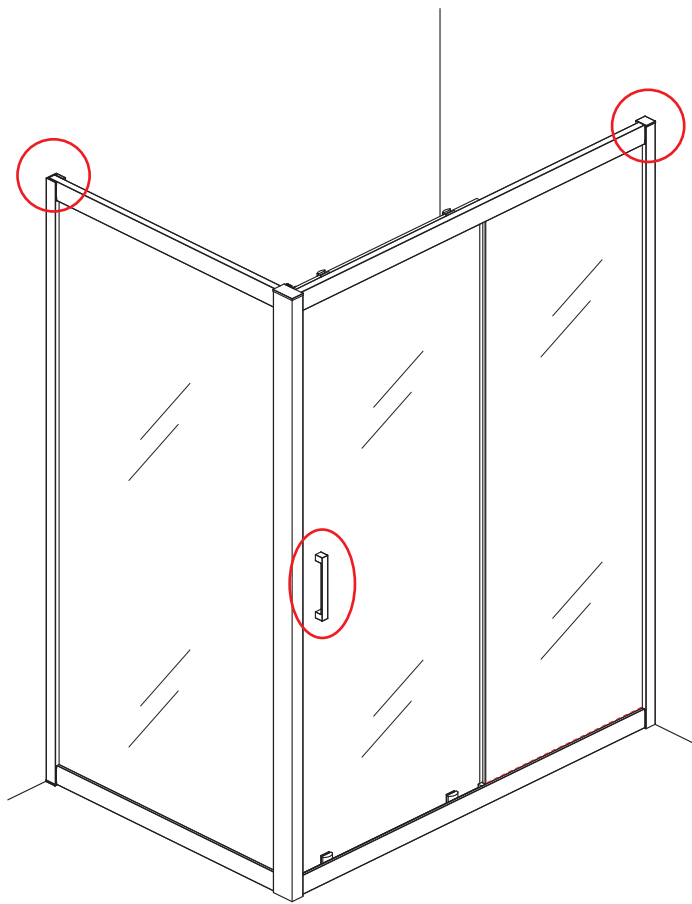

Voorzie alen de buitenzijde van de cabine van siliconenkit.

